

Case study - Building material

Microbes on building materials - Evaluation of DNA extraction protocols as common basis for molecular analysis.

Jörg D. Ettenauer, Guadalupe Piñar, Ksenija Lopandic, Bernhard Spangl, Günther Ellersdorfer, Christian Voith, Katja Sterflinger
Science of the Total Environment. 2012. Vol 439.

Overview


- **Keywords:** Building materials, DNA extraction, DNA purity, PCR
- **Aim of the study:** Analyzing microbial communities in building materials
- **Sample name:** Plaster, red brick and gypsum
- **Material:** FastPrep-24™ homogenizer, FastDNA™ Spin Kit for Soil containing Lysing Matrix E
- **Buffer:** Sodium Phosphate Buffer & MT Buffer (provided with the Kit)

Protocol and Parameters

1. Sampling was done using a sterile scalpel or an ethanol flamed hammer and a chisel to remove the material from the walls and collected it in sterile plastic bags.
2. The transport and storage of the sampling material were done at room temperature.
3. In the laboratory, samples were ground for 2 min in liquid nitrogen using a sterile mortar and pestle, collected in a sterile 50 ml falcon tube and homogenized by manual shaking.
4. Three different sample amounts of each material, 50 mg, 100 mg and 250 mg (each in triplicate), were weighed in a Sartorius precision scale for each extraction method.
5. Tubes were either immediately processed or stored at – 20 °C. The resulting nine samples for each method were further subjected to the different DNA extraction methods.
6. When using the FastDNA™ Spin Kit for Soil method, samples were processed two times in the FastPrep® homogenizer for 40 s at a speed of 6 m/s.

Results

A proven Gold Standard Method!

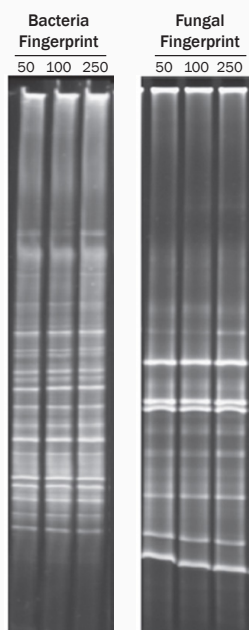

Representative examples of bacteria and fungal fingerprints obtained from the plaster material. The banding patterns of the three tested sample amounts (50,100,250 mg) from the FastDNA™ Spin kit for soil.

Conclusion

- Up to thirteen extraction methods were evaluated with three building materials. The FastDNA™ Spin kit for soil showed to be the best DNA extraction method and could provide positive results for all tests with all tested samples.
- This study shows that the FastPrep® extraction method is a gold standard for quantification of indoor fungi and bacteria in building materials.

Successful sample preparation using the MP Biomedicals FastPrep® product line has been highlighted in thousands of scientific articles. To access articles and other materials, visit www.mpbio.com/FastPrepLibrary.

www.mpbio.com



50F0915-1



Distributor pro Českou republiku a Slovensko:

M.G.P. spol. s r.o.
Kvítková 1575
Zlín 760 01
Česká republika
tel. +420 577 212 140
e-mail: mgp@mgp.cz

MGP spol. s r.o.
Šustekova 2
Bratislava 851 04
Slovensko
tel. +421 254 654 841
e-mail: mgp@mgpslov.sk